



HEAT EXPERIENCE
BATTERY HEATED
GLOVES/MITTENS

USER MANUAL
BRUKSANVISNING
ANVÄNDARMANUAL
BETRIEBSANLEITUNG
KÄYTTÖOHJE
MANUEL UTILISATEUR
MANUAL DE USUARIO
MANUALE UTENTE
MANUAL DO USUÁRIO

IMPORTANT INSTRUCTIONS, RETAIN FOR FUTURE USE

Important instructions. Read before use.
Retain for future use.

Read all information following this product before you start
using it.

BEFORE USE

Congratulations on your new Heat Experience Heated gloves or mittens. Before you start using them there are some things you should know.

The battery should be fully charged before first use, or after a long period of no use (2 months or more). The battery needs to be charged to 50-80% every 2-3 months for maintainance. See “care and maintainance” for more information on battery charging.

Charge the battery by connecting both batteries to a charger using the supplied charging cable. The charger should at least deliver 5V/3A.

Never charge unattended.

When the red light is lit, charging is ongoing. Never charge unattended. Always charge both batteries at the same time. This is important for the split charging cable to work as intended.


Charging takes about 3 hours. When charging is complete, the light turns from red to green. Disconnect the batteries from the charger, and the charger from the power outlet, when charging is finished.

The heating system has three different heating levels. For the best effect, turn on the heat before you get cold.

We recommend that you get to know the product before use.

GETTING STARTED

1. CHARGE BATTERY

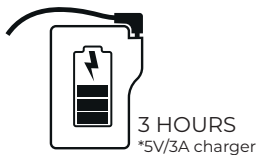

2. CONNECT BATTERY AND PUT INTO POCKET

3. HOLD BUTTON 3 SEC. TO TURN ON (AND OFF)



4. PRESS POWER BUTTON TO SWITCH BETWEEN HEATING LEVELS



EN

Open the battery pocket and connect the battery to the cable before inserting it into the pocket. Make sure not to put unnecessary stress on the cable or connector.

Press and hold the button on the glove for ~3 seconds, until the light in the button turns red. This indicates the heating system is on and heating at the highest level. Short press to switch between heating levels. We recommend starting at the warmest level to get warm, and then turn it down to medium or low to save energy.

CARE AND MAINTAINANCE

We do not recommend to wash your gloves often, but sometimes it is necessary. Remember to remove battery before washing.

1) Put your glove on and use a cloth with lukewarm water and soap. Squeeze the glove carefully after wash.

2) Gloves should be hang dried in room temperature. Avoid tumble driers, open flames, heaters and ovens. Let connector hang freely to dry properly before use.

3) Do not turn the gloves or mittens inside out. This could lead to misplacement of the liner, insulation or heating elements/cables.

- For models with leather parts, treat the leather of the glove with a wax intended for this purpose. Disconnect the battery when the gloves are not in use.

 Charge battery to about 50-80% for long term storage. Repeat every two to three months of storage. This is important to avoid potential deep discharge, which can cause irreversible damage, and potentially destroy the battery.

HEATING LEVELS

EN

Level	Temperature*	Light	Duration*
LOW	35-45°C	 / 	~5 hours
MEDIUM	40-50°C	 / 	~3,5 hours
HIGH	45-55°C	 / 	~2 hours



The duration and given temperature will vary depending on ambient temperature and conditions. A cold battery will have reduced lifetime. A good tip is to keep the batteries close to your body until you need them.

BATTERY SPECS

Description	Value	Remark
Battery Voltage	7.4 V	
Battery Capacity	2200 mAh	Li-ion Polymer
Charging Voltage Peak	8.4 $\pm$ 0.05 V	
Discharge cutoff Voltage	5.9 $\pm$ 0.15V	
Charging Mode	CC/CV	
Battery's Max. Charging Current	1,1 A	0°C~45°C
Battery's Max. Discharging Current	2,2 A	-20°C~60°C

CAUTION:

Never leave batteries unattended while charging.

Never leave charger in socket after charging.

Use only original battery.

Never charge a swollen or damaged battery.

Charge to 50-80% before long term storage to avoid permanent damage of the battery.

CONTACT

Do you have any more questions, feel free to reach out;

Contact info:

Heatexp AS
Østre Rosten 102b
7075 Tiller, NORWAY

Norwegian customers:

+4773848210

support@heatx.no

heatexperience.no

EU customers:

+31 30 2001153

support@heatx.eu

heatexperience.eu

Follow us on social media:

facebook.com/theheatexperience

Instagram: Heat Experience

We hope you enjoy your product.
Kind regards, The Heat Experience Team.

Viktige instruksjoner. Les før bruk. Behold
for fremtidig bruk.

Les all informasjon som følger med dette produktet før du tar
det i bruk.

FØR BRUK

Gratulerer med dine nye Heat Experience varmemansker eller varmegloves. Før du tar dem i bruk er det et par ting som kan være kjekt å vite for å sikre en best mulig opplevelse.

Batteriene bør lades helt opp før første gangs bruk, og etter lengre tids lagring (2 måneder eller mer). Batteriene bør lagres med 50-80% strøm, og vedlikeholdslades hver 2.-3. mnd.

NO


Lad batteriet ved å koble begge batteriene til en lader ved hjelp av den medfølgende ladekabelen. Laderen skal minst levere 5V/3A. Lad aldri uten tilsyn. Lad alltid begge batteriene samtidig. Dette er viktig for at ladekabelen skal fungere riktig.

En ladesyklus tar omtrent 3 timer. Når batteriene er fulladet, vil lyset på laderen skifte fra rødt til grønt. Koble laderen fra kontakten og batteriene når lading er fullført.

Varmesystemet har tre ulike varmenivåer. Skru på varmen før du blir kald for å oppnå best effekt. Vi anbefaler at du blir kjent med produktet, varmenivå og varmetid før bruk.

KOM I GANG

1. LAD BATTERIET

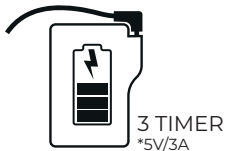

2. KOBLE TIL BATTERIET OG LEGG DET I LOMMEN

3. HOLD KNAPPEN INNE I ~3 SEKUNDER FOR Å SLÅ PÅ



4. TRYKK FOR Å SKIFTE MELLOM VARMENIVÅER



LAV



MEDIUM



HØY



Åpne batterilommen og koble batteriet til kabelen før du setter det inn i lommen. Pass på at du ikke legger unødig belastning på kabelen eller kontakten.

Trykk og hold knappen på hansken i ~3 sekunder, til lyset i knappen blir rødt. Dette indikerer at varmesystemet er på og oppvarming på høyeste nivå. Kort trykk for å bytte mellom varmenivåer. Vi anbefaler å starte på det varmeste nivået for å bli varm, og deretter skru ned til middels eller lavt for å spare energi.

NO

VASK OG VEDLIKEHOLD

Vi anbefaler å vaske hanskene minst mulig, men av og til er det nødvendig, da er dette noen gode råd;

1) Fjern batteriet fra hansken. Ta på hansken og vask den med en klut med lunkent/varmt vann. Hansken tåler godt vann. Klem hansken forsiktig for å få ut vann. Ikke vri hanskene!

2) Hanskene bør tørkes i romtemperatur. Heng de opp, så tørker de raskest mulig, og holder formen. La kabelen henge fritt slikk at den får tørket skikkelig før bruk. Unngå tørketrommel, åpen flamme, panelovner og lignende. Høy varme vil tørke ut skinnet.

3) Ikke vring hanskene. Dette kan medføre forskyvning av føret, varmeelementene og kabler, og kan være vanskelig å vrenge tilbake.
-For modeller med lær, behandle læret på hansken med voks beregnet på dette. Koble fra batteri når hanskene ikke brukes.

 Lad batteri til omtrent 50-80% ved lang tids lagring (over 2 mnd). Gjenta hver 2.-3. måned. Dette er viktig for å unngå dyputlading, som kan gjøre uopprettelig skade på battericellene, og betydelig redusere batterilevetiden. I verste fall kan batteriet slutte å virke.

VARMENIVÅ

Varmenivå	Temperatur*	Lys	Batteritid*
LAV	35-45°C	 / 	~5 timer
MEDIUM	40-50°C	 / 	~3,5 timer
HØY	45-55°C	 / 	~2 timer



Varighet og oppgitt temperatur vil variere med omgivelser og temperatur. Opplevd temperatur utendørs vil ofte være lavere på grunn av varmetap. Et kaldt batteri vil ha redusert levetid.

NO

BATTERISPESIFIKASJONER

Description	Value	Remark
Battery Voltage	7.4 V	
Battery Capacity	2200 mAh	Polymer Li-ion battery
Charging Voltage Peak	8.4 $\pm$ 0.05 V	
Discharge cutoff Voltage	5.9 $\pm$ 0.15V	
Charging Mode	CC/CV	
Battery's Maximum Charging Current (Ordinary Battery)	1,1 A	0°C~45°C
Battery's Maximum Discharging Current (Ordinary Battery)	2,2 A	-20°C~60°C

ADVARSEL:

Lad aldri uten tilsyn. Bruk kun originalt batteri (7.4V)

Koble alltid laderen fra stikkontakten etter lading.

Lad eller bruk aldri batterier som har tegn til hevelse eller andre skader.

Batterier skal alltid lades til 50-80% før lagring over 2 mnd for å unngå permanent skade på batterietcellene.

KONTAKT

Om du har spørsmål, ta gjerne kontakt:

Heatexp AS
Østre Rosten 102b
7075 Tiller, NORWAY

NO

Norwegian customers:

+4773848210

support@heatx.no

heatexperience.no

EU customers:

+31 30 2001153

support@heatx.eu

heatexperience.eu

Følg oss på sosiale media:

facebook.com/theheatexperience

Instagram: Heat Experience

Vi håper du liker produktene våre.
Med vennlig hilsen, The Heat Experience Team.

- (SE) För att ladda ner den här bruksanvisningen på ett annat språk, besök
heatx.eu/support
- (FI) ladataksesi tämän käyttöoppaan muilla kielillä, käy osoitteessa
heatx.eu/support
- (DE) Um dieses Benutzerhandbuch in anderen Sprachen herunterzuladen, besuchen Sie bitte heatx.eu/support
- (NL) om deze gebruikershandleiding in andere talen te downloaden, gaat u naar heatx.eu/support
- (FR) pour télécharger ce manuel d'utilisation dans d'autres langues, veuillez visiter heatx.eu/support
- (ES) para descargar este manual de usuario en otros idiomas, visite heatx.eu/support
- (IT) per scaricare questo manuale utente in altre lingue, visitare il sito heatx.eu/support